

PodView® LI40

Level Indicator

ICENTA 

Application

Compatible with any EchoPod® sensor, the general purpose level indicator displays the measured value, applicable relay status and set point configuration of the attached sensor, as the sensor was configured to operate by WebCal software. PodView requires no programming, and receives both power and data from the connected sensor. Through the indicator, users can adjust EchoPod relay set points in the field. PodView is installed up to 15' (4.5m) away from the sensor in a panel or NEMA enclosure.



Features

- Field mount indicator for use with EchoPod sensors
- Indicates level or volume and EchoPod relay status
- Enables EchoPod relay set point changes in the field
- Powered directly by the attached EchoPod sensor
- Repeats EchoPod sensor data with no programming
- Corrosion resistant enclosure with NEMA 4 faceplate

Compatibility

- EchoPod sensors operating on V50 firmware or higher
- V50 firmware is available via WebCal® 6 software or higher
- Maximum distance between PodView & EchoPod is 4.5m (15')



Compatible Products



DL14

ECHOPOD®
Multi-Function
Ultrasonic Level
Transmitter



DL24

ECHOPOD®
Multi-Function
Ultrasonic Level
Transmitter



DL10

ECHOPOD®
Ultrasonic Level
Transmitter

PodView[®] LI40


Level Indicator



Specifications

Display type:	LCD, 6-digit with 4 relay indicators
Display units:	Engineering
Display output:	-99999 to 999999
Character height:	0.374" (9.5mm)
Decimal point:	Fixed
Dot indication:	Relay status
User interface:	Three button
Sensor input:	(1) EchoPod [®] sensor
Supply voltage:	Provided by EchoPod
Operating temp.:	F: -4° to 140° C: -20° to 60°
Cable type:	4-conductor, #22 AWG
Cable length:	6' (1.8m)
Cable jack. mat.:	Polyurethane
Enclosure rating:	NEMA 4 (IP65) faceplate
Enclosure mat'l:	Polycarbonate
Enclosure type:	Panel mount
Button material:	Silicon rubber
Classification:	General purpose
Compliance:	CE

Dimensions

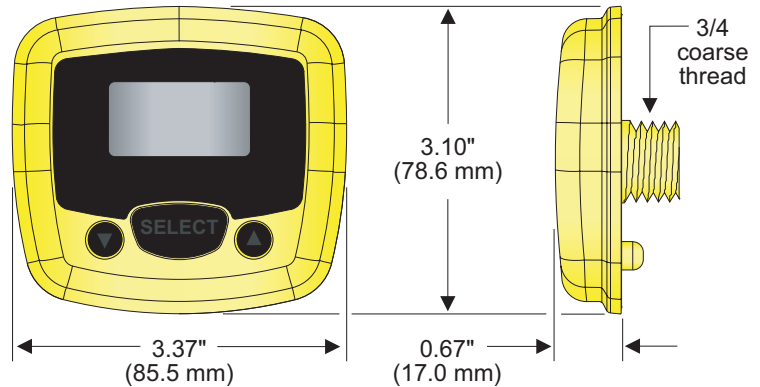


Configuration



LI99-1001

Sensors and PodView indirectly, are configurable via our free WebCal PC software and one Fob USB adapter. Sensors are offered with and without Fobs. Fobs are universal and can be used to configure any WebCal compatible product. Download your free copy of WebCal in English or Chinese.

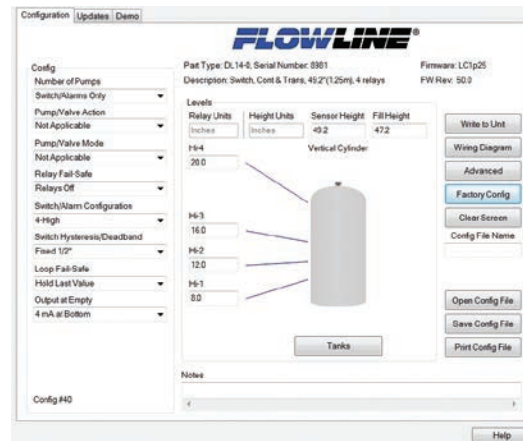

Ordering

LI40-1001 ⁽¹⁾

NOTES

- 1) PodView is compatible with EchoPod sensors configured with WebCal 6 software and updated to V50 firmware or higher using one LI99-1001 USB fob adapter. WebCal is a free download from our website.