# EchoPod® DL24

Multi-Function Ultrasonic Liquid Level Transmitter



# **Application**

The general purpose ultrasonic transmitter provides continuous level measurement up to 9.8' (3m) with a 4-20 mA signal output and four relays, and is configured via our free WebCal® software. Each relay is fully configurable for automatic fill, empty or alarm functions, and the embedded level controller may lower cost by replacing external control hardware. This non-contact liquid level sensor is well suited for corrosive, sticky or waste liquids, and is selected for IBC or drum, cooling tower, day tank, skid or machine, open channel and chemical feed applications.









#### **Features**

- Level detection, switch and control functions up to 9.8' (3m)
- Configuration is fast and easy via WebCal software and USB adapter
- Narrow 2" beam width and short 4" dead band optimized for small tanks
- Four programmable relays for switch, pump or valve control and fail-safety
  - 1 pump or valve with 3 alarms
  - 2 pumps lead-lag with 2 alarms
  - 2 pumps duplexing with 2 alarms
  - 4 independent switch point alarms
- PVDF transducer and 6P polycarbonate enclosure for corrosive liquids
- Automatic temperature compensation for accurate measurement

#### Success

About 1.3M polyethylene tanks are sold in North America each year ranging in size from 1 to 15,000 gallons. Most of these are less than 6' in height with capacities under 500 gallons. The largest markets are industrial manufacturing, municipal, agriculture and residential in chemical, water & wastewater applications. Over the past 10 years, customers



have moved toward the use of smaller storage tanks with increased automation to lower cost, and mini-bulk tanks are now a major product category. Flowline has developed a multifunction sensor to meets the needs of this growing market. The DL24 EchoPod puts non-contact level measurement, relay switch and advanced control functions in the palm of your hand.

# **Compatible Products**



LI25-1

**DATALOOP™** Level Indicator



**DATAVIEW**<sup>TM</sup>

Level Controller



LI40

**PODVIEW<sup>TM</sup>** Level Indicator

# EchoPod® DL24

Multi-Function Ultrasonic Liquid Level Transmitter



## **Specifications**

Range: Accuracy: ± 0.2% of range 0.039" (1mm) Resolution: Dead band: 4" (10cm) Beam width: 2" (5.08cm) Configuration: WebCal® PC Windows® USB 2.0

Memory: Non-volatile Supply voltage: 24 VDC (loop)

Consumption: 0.5W Loop resist.:  $400\Omega$  max

Signal output: 4-20 mA, two-wire Signal invert: 4-20 mA or 20-4 mA Signal fail-safe: 4 mA, 20 mA, 21 mA,

22 mA or hold last

Contact type: (4) SPST relays Contact rating: 60 VA, 1A maximum Contact fail-safe: Power loss: Hold last

Echo loss: Open, close

**Hysteresis:** Selectable Process temp.: F: 20° to 140°

C: -7° to 60°

or hold last

Temp. comp.: Automatic Ambient temp.: F: -31° to 140°

C: -35° to 60°

Pressure: MWP = 30 PSI (2 bar)**Enclosure rating:** Type 6P, encapsulated,

corrosion resistant &

DL24 -

submersible

Encl. material: Polycarbonate

Trans. material: **PVDF** 

Cable jacket mat: Polyurethane


Cable type: 9-conductor, shielded

Cable length: 48" (1.2m) **Process mount:** 1" NPT (1" G)

Mount gasket: Viton®

Classification: General purpose Compliance: CE, RoHS Approvals: cFMus

#### **Dimensions**

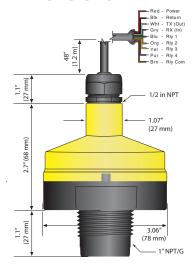

### Configuration







The level sensor is configurable via our free WebCal PC software and Fob USB adapter. The sensors are offered with and without Fobs. Fobs are universal and can be used to configure any WebCal compatible product. Download your free copy of WebCal in English or Chinese.

## **Fittings**

For optimum performance, install the level sensor using the below recommended or direct equivalent fittings.

### P/N LM52-1400

# **DESCRIPTION**

2" NPT x 1" NPT. PVC. schedule 40 LM52-1800 2" NPT x 1" NPT, PVC, schedule 80



LM52-1410 LM52-1810

2" socket x 1" NPT, PVC, schedule 40 2" socket x 1" NPT, PVC, schedule 80



LM52-1850

1" ANSI x 1" NPT, CPVC, schedule 80



LM50-1001-1

1" NPT side mount bracket, PP

# **Ordering**

#### PROCESS MOUNT (1)

0 NPT (US)

1 G (Metric)

#### FOB USB ADAPTER (2)

- Without Fob 0
- With Fob 1

#### **NOTES**

- Install the level sensor using Flowline installation fittings or equivalents.
- The level sensor is configured via our WebCal software and one LI99-1001 Fob USB adapter. The level sensor is offered with and without a Fob. Fobs are universal and can be used to configure any WebCal compatible product. WebCal is a free download from our website.