


B-CONNECTED

FLOWRATE INDICATOR / TOTALIZER

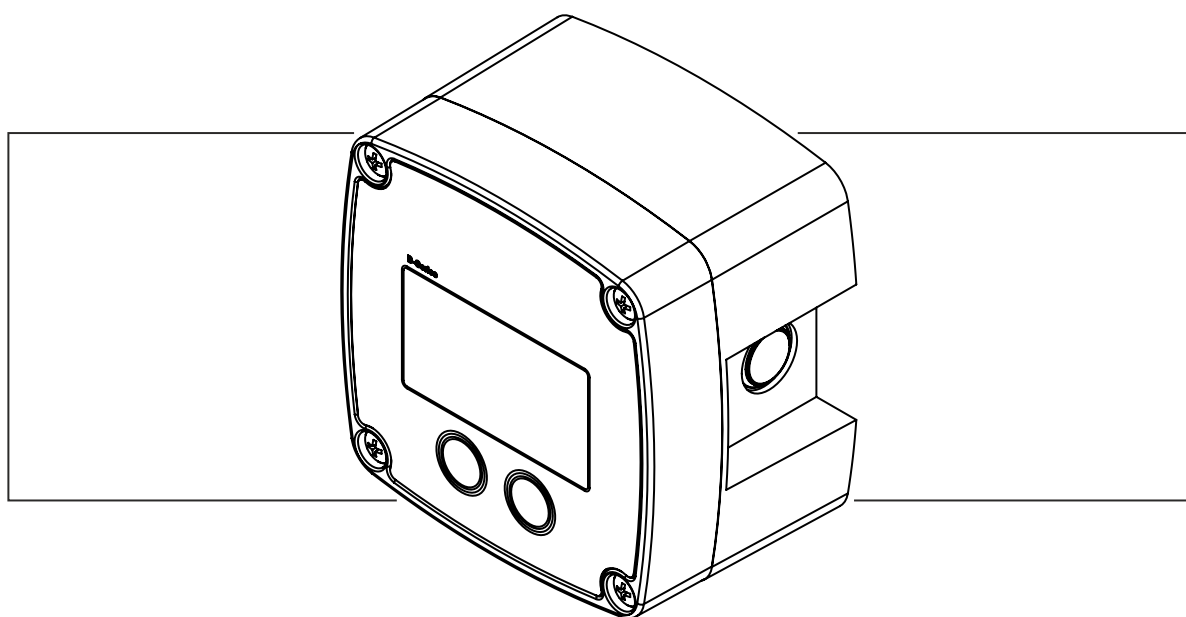

Signal input flowmeter: pulse, NAMUR and coil

***Signal outputs: Analog referenced flowrate and scaled pulse
referenced total, Modbus communication***



SAFETY INSTRUCTIONS



- Any responsibility is lapsed if the instructions and procedures as described in this manual are not followed.
- **LIFE SUPPORT APPLICATIONS:** The B-CONNECTED is not designed for use in life support appliances, devices, or systems where malfunction of the product can reasonably be expected to result in a personal injury. Customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify the manufacturer and supplier for any damages resulting from such improper use or sale.
- Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the B-CONNECTED, the installer has to discharge himself by touching a well-grounded object.
- The B-CONNECTED must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).

DISPOSAL OF ELECTRONIC WASTE



- At the end of its life this product should be disposed of according to the (inter)national regulations regarding waste electronic equipment. If a battery is installed in this product it should be disposed of separately. The separate collection and recycling of your waste equipment will help to conserve natural resources and ensure that it is recycled in a manner that protects the environment.

SAFETY RULES AND PRECAUTIONARY MEASURES

- The manufacturer accepts no responsibility whatsoever if the following safety rules and precautions instructions and the procedures as described in this manual are not followed.
- Modifications of the B-CONNECTED implemented without preceding written consent from the manufacturer, will result in the immediate termination of product liability and warranty period.
- Installation, use, maintenance and servicing of this equipment must be carried out by authorized technicians.
- Check the mains voltage and information on the manufacturer's plate before installing the B-CONNECTED.
- Check all connections, settings and technical specifications of the various peripheral devices with the B-CONNECTED supplied.
- Never open the enclosure while connected to power supplying or consuming devices other than the internal battery supply.
- Open the B-CONNECTED only if all leads are free of potential.
- Never touch the electronic components (ESD sensitivity).
- Never expose the system to heavier conditions than allowed according to the enclosure classification (see manufacture's plate and chapter 4.2.).
- If the operator detects errors or danger, or disagrees with the safety precautions taken, then inform the owner or principal responsible.
- The local labor and safety laws and regulations must be adhered to.

ABOUT THE OPERATION MANUAL

This operation manual is divided into two main sections:

- The daily use of the B-CONNECTED is described in chapter 0 "Operational". These instructions are meant for users.
- The following chapters and appendices are exclusively meant for electricians/technicians. These provide a detailed description of all software settings and hardware installation guidance.

This operation manual describes the standard B-CONNECTED. For additional information, please contact your supplier.

A hazardous situation may occur if the B-CONNECTED is not used for the purpose it was designed for or is used incorrectly. Please carefully note the information in this operating manual indicated by the pictograms:



A "**warning !**" indicates actions or procedures which, if not performed correctly, may lead to personal injury, a safety hazard or damage of the B-CONNECTED or connected instruments.



A "**caution !**" indicates actions or procedures which, if not performed correctly, may lead to personal injury or incorrect functioning of the B-CONNECTED or connected instruments



A "**note !**" indicates actions or procedures which, if not performed correctly, may indirectly affect operation or may lead to an instrument response which is not planned.

WARRANTY AND TECHNICAL SUPPORT

For warranty and technical support for your products, please contact your supplier, visit our internet site www.fluidwell.com or contact us at support@fluidwell.com.

Hardware version : 03.32.07
 Software version : 03.06.xx
 Manual : FW_B-CONNECTED_v0306-02_EN.docx
 © Copyright 2022 : Fluidwell B.V. - the Netherlands

Information in this manual is subject to change without prior notice. The manufacturer is not responsible for mistakes in this material or for incidental damage caused as a direct or indirect result of the delivery, performance or use of this material.

© All rights reserved. No parts of this publication may be reproduced or used in any form or by any means without written permission of your supplier.

CONTENTS MANUAL

SAFETY INSTRUCTIONS	2
DISPOSAL OF ELECTRONIC WASTE	2
SAFETY RULES AND PRECAUTIONARY MEASURES	2
ABOUT THE OPERATION MANUAL	3
WARRANTY AND TECHNICAL SUPPORT	3
CONTENTS MANUAL	4
1 INTRODUCTION	5
1.1 System description of the B-CONNECTED	5
2 OPERATIONAL	7
2.1 General information	7
2.2 Control panel.....	7
2.3 Operator information and functions	7
2.4 Operator Alarms.....	8
3 CONFIGURATION	9
3.1 Introduction	9
3.2 Programming SETUP-level.....	9
3.2.1 Entering SETUP-level	9
3.2.2 Navigating the SETUP-menu.....	9
3.2.3 Changing configuration settings	10
3.2.4 Returning to OPERATOR-level	11
3.3 Configuration settings	11
3.3.1 Overview functions SETUP-level.....	11
3.3.2 Menu 1 – Total	12
3.3.3 Menu 2 – Flowrate	13
3.3.4 Menu 3 – Meter (flowmeter).....	13
3.3.5 Menu 4 – A-OUT (analog output)	13
3.3.6 Menu 5 – D-OUT (digital or pulse output).....	14
3.3.7 Menu 6 – COMM (Modbus communication)	15
3.3.8 Menu 7 – Other	15
4 INSTALLATION	16
4.1 General directions	16
4.2 Installation / surrounding conditions	16
4.3 Handling the B-Series enclosure	17
4.3.1 Identification.....	17
4.4 Mechanical Installation.....	18
4.4.1 Dimensions – Enclosure	18
4.4.2 Mounting	19
4.5 Electrical Installation	20
4.5.1 Electrical safety	20
4.5.2 Sensor supply voltage.....	20
4.6 Terminal connectors	21
4.7 Terminal Connections	21
4.7.1 Terminal 1-4: Flowmeter input	21
4.7.2 Terminal 5-6: Isolated analog output	23
4.7.3 Terminal 7-8: Isolated digital output.....	24
4.7.4 Terminal 9-10: Power supply	24
4.7.5 Terminal C1-C3: RS485 port	25
5 MAINTENANCE	26
5.1 General directions	26
5.2 instructions for repair	27
5.3 Battery replacement.....	27
5.3.1 Safety instructions.....	27
5.3.2 Disposal of batteries	27
APPENDIX A. TECHNICAL SPECIFICATION	28
APPENDIX B. PROBLEM SOLVING	30
APPENDIX C. MODBUS COMMUNICATION	31
APPENDIX D. DECLARATION OF CONFORMITY	34
INDEX OF THIS MANUAL	35
LIST OF FIGURES	35

1 INTRODUCTION

1.1 SYSTEM DESCRIPTION OF THE B-CONNECTED

Functions and features

The flowrate / totalizer model B-CONNECTED is a microprocessor driven instrument designed to show flowrate, total, accumulated total and to transmit the flow data. It is designed to be used in ordinary locations.

This product has been designed with a focus on:

- User-friendliness: easy two button operation.
- Intuitive “Know one, know them all!” configuration menu, saving time, cost and aggravation.
- Good readings in full sunlight and darkness through a bright backlight.
- Mounting flexibility: with a compact and durable IP65 enclosure for field, wall or meter mounting.
- Ability to process most common pulse signals.
- Multiple power supply options to suit any application, including battery supply, 10-30V DC and output loop powered.
- Configurable pulse and analog signal outputs.
- Modbus communication

Flowmeter input

This manual describes the B-CONNECTED with a pulse type input from the flowmeter.

One flowmeter with a passive or active pulse, NAMUR or coil signal output can be connected to the B-CONNECTED. To power the sensor, several options are available.

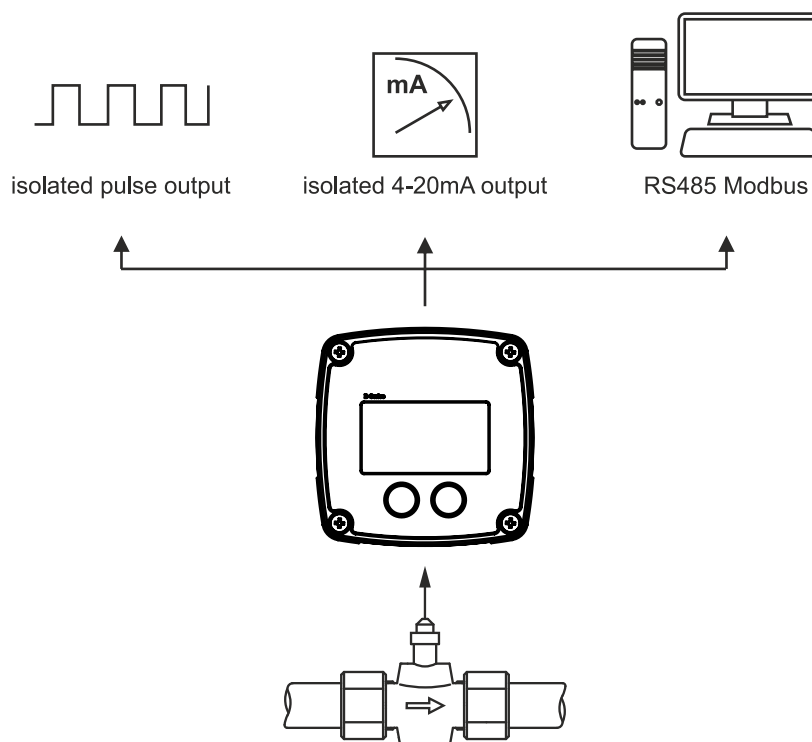


Fig. 1: Typical application for the B-CONNECTED

Standard outputs

- Configurable pulse output to transmit pulses representing a certain total quantity. The pulse length can be set to be short (5 msec. – max. 100Hz.), intermediate (15msec. – max. 33Hz) or long (100msec. – max. 5Hz.).
- Configurable linear 4-20mA analog output with 10-bits resolution representing the actual flowrate. Flowrate levels as well as the minimum and maximum signal output can be tuned.
- Modbus communication through RS485 communications port

Configuration

The B-CONNECTED has been designed to be implemented in many types of applications. For that reason, a SETUP-level is available to configure your B-CONNECTED according to your specific requirements.

It includes several important features, such as K-Factor, measurement units, signal selection etc. All settings are stored in an EEPROM memory and will not be lost in the event of a power failure or a drained battery.

Display information

The B-CONNECTED has a LCD with seven 12mm (0.47") and seven 7mm (0.28") digits and several symbols. Flowrate is displayed as main information while total and accumulated total will be displayed after pressing the SELECT button.

Backlight

A backlight is standard available (externally powered only).

2 OPERATIONAL

2.1 GENERAL INFORMATION

This chapter describes the daily use of the B-CONNECTED. This instruction is meant for users / operators.



Caution !

- The B-CONNECTED may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed
- Take careful notice of the “Safety rules, instructions and precautionary measures” in the front of this manual.

2.2 CONTROL PANEL

The following keys are available:



Fig. 2: Control panel

Functions of the keys



SELECT-key

 
This key is used to:

- SELECT the displayed information, like accumulated total and flowrate.
- gain access to SETUP-level; please read chapter 3.



CLEAR-key

This key is used to CLEAR the value of total.



SELECT + CLEAR-key

Press both keys simultaneously to program and save new values or settings.

2.3 OPERATOR INFORMATION AND FUNCTIONS

By default, the B-CONNECTED will act at Operator level. For the Operator, the following functions are available:

Display process values

On the main screen, the primary process value is shown: Flowrate on the upper-line of the display and the measuring and time unit on the bottom line.



Fig. 3: Example of display information during process

By pressing the SELECT-key, the operator can scroll through the screens showing the various process values. The following table shows the available information:

Display information	Function
MAIN SCREEN	Flowrate
SCREEN 1	Total and reset Total
SCREEN 2	Acc. Total

Display flowrate

Internally, the flowrate is calculated up to 8 times a second, To obtain a readable value, the flowrate shown on the display is updated once every second. Flowrate is shown, based on the configuration settings for Flowrate, with the configured number of decimals. The configured unit and time unit are indicated on the bottom line of the display.

When “-----“ is shown, the flowrate value is too high to be displayed.

Display total and accumulated total

A resettable Total and non-resettable Accumulated Total are available. Both totalizers can count up to 9.999.999 before rolling over to zero. The unit and number of decimals are displayed according to the configuration settings for Total.

Clear total

The value for Total can be cleared and reset to zero. This action does not influence the value of Accumulated Total.

To clear Total, press the CLEAR-key when Total is shown on the display and the display will show the flashing text “CLEAR – NO YES”. When the CLEAR-key is pressed a second time, Total is reset to zero. To avoid clearing Total at this point, press the SELECT-key or wait for 20 seconds.

2.4 OPERATOR ALARMS

Low-battery alarm

During operation the battery voltage drops. When the battery voltage becomes too low, the text “LOW BAT” will displayed; an indication that the operation become less reliable. When the battery indication is on, install a fresh and new battery (as soon as possible) to keep a reliable operation and indication.

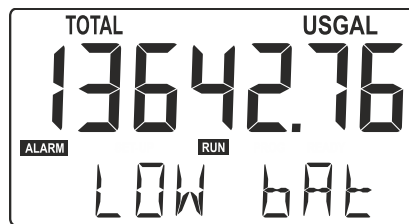


Fig. 4: Example of low-battery alarm.

Alarm #####

When "ALARM" is displayed, press the SELECT key to display the reason of the alarm. Please consult Appendix B: problem solving.

3 CONFIGURATION

3.1 INTRODUCTION

This and the following chapters are exclusively meant for electricians and non-operators. In these, an extensive description of all software settings and hardware connections are provided.



- Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this manual before carrying out its instructions.
- The B-CONNECTED may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. The housing may only be opened by authorized personnel.
- Take careful notice of the “Safety rules, instructions and precautionary measures” in the front of this manual.

3.2 PROGRAMMING SETUP-LEVEL



Changing the settings of the B-CONNECTED may have an influence on the current operation of the device, even when SETUP-level is still active.

Make sure that the unit is not being used for any application when altering the settings.

3.2.1 ENTERING SETUP-LEVEL

Configuration of the B-CONNECTED is done at SETUP-level, which can be reached at all times while the B-CONNECTED remains fully operational. At SETUP-level the display will deactivate the **RUN** indicator and activate the **SETUP** indicator.

Use the control panel to access SETUP-level



SELECT-key

To enter SETUP-level, press the SELECT-key for 7 seconds at OPERATOR-level. During this time, the symbol **SETUP** will be flashing.

When SETUP-level is entered, a password might be required to continue. You can enter the PIN by following the procedure for programming values as described in the following paragraphs.



Note !

A password may be required to enter SETUP.

Without this password access to SETUP is denied.

3.2.2 NAVIGATING THE SETUP-MENU

Each function has a unique menu-number, which is displayed below the **SETUP** indicator at the bottom of the display. The menu-number is a combination of two figures, e.g. 1.2. The first number indicates the function-group and the second number indicates the function. Additionally, each function and function-group is expressed with a keyword.

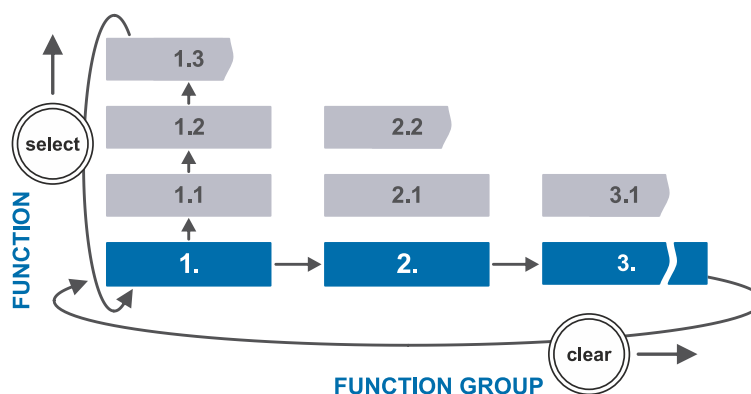


Fig. 5: SETUP-menu matrix structure

Use the control panel to navigate the SETUP-menu



SELECT-key

This key is used to select the next function in the list (e.g. 1 → 1.1 → 1.2 → 1). When the top of the list is reached, it will wrap around and return to the function group selection.



CLEAR-key

This key is used to select the previous function in the list (e.g. 1.2 → 1.1 → 1 → 2). When the bottom of the list is reached, it will return to the function group selection. When only a function group is selected (and no function), this key is used to scroll to the next function group. (e.g. 1 → 2 → 3 → 1).

3.2.3 CHANGING CONFIGURATION SETTINGS

After selecting a function in the SETUP-menu, a new value can be programmed using the control panel. A function either contains a value (a number with optionally a decimal point, e.g. 123.45) or a list with items (e.g. Disable – Enable).

 
For each function that needs to change, navigate to that function and follow the steps indicated below. During the programming sequence, the display will activate the **PROG** indicator.



Note !

When programming new values, alterations will only be set after the SELECT- and CLEAR- keys have been pressed simultaneously to confirm the new value! (STEP 3)

Step 1: Starting the programming sequence



SELECT + CLEAR-key

When a function is selected at SETUP-level, press both keys simultaneously to start the programming sequence.

Step 2a: Changing a value



SELECT-key

This key is used to increment the selected digit or to select the next position of the decimal point.



CLEAR-key

This key is used to select the next digit or to select the previous position of the decimal point.

Step 2b: Changing the selected item in a list



SELECT-key

 
This key is used to select the next item in the list (e.g. Disable → Enable). At the end of the list, the selection will wrap around to the first selection.



CLEAR-key

This key is used to select the previous item in the list (e.g. Enable → Disable). At the bottom of the list, the selection will wrap around to the last selection.

Step 3: Finishing the programming sequence



SELECT + CLEAR-key

During the programming sequence, pressing both keys simultaneously is used to confirm the new value and return to SETUP-level. To cancel the operation, wait for 20 seconds: the programming sequence is cancelled and the former value is reinstated.

3.2.4 RETURNING TO OPERATOR-LEVEL

When all settings are configured correctly, the unit can be returned to OPERATE-level. Please keep a record of all settings for later reference.

Use the control panel to return to OPERATE-level



SELECT-key

In order to return to the operator level, press the SELECT-key for three seconds. When no keys are pressed for 2 minutes, SETUP-level will be left automatically. The display will deactivate the **SETUP** indicator and activate the **RUN** indicator.

3.3 CONFIGURATION SETTINGS

All settings of the B-CONNECTED can be set via the control panel and the SETUP-menu. Additionally, configuration of the B-CONNECTED can be done using a PC with our free of charge Remote Configuration Tool, which allows you to setup the configuration as desired, up- or download the settings to the device and print a hardcopy for each product.

The connection between the B-CONNECTED and the PC is made by means of an RS485 communications port, available on terminals C1-C3. To support 'configuration on the desk' a special RS485 communications cable is available that can be ordered separately, as described in section 4.7.4: Terminal C1-C3: RS485 port.

The Remote Configuration Tool software package can be downloaded from our website at www.fluidwell.com/software and installed on a Microsoft Windows PC using the installation program. The installation also contains a Quickstart manual which gives detailed instructions on how to achieve a successful connection between PC and device.

3.3.1 OVERVIEW FUNCTIONS SETUP-LEVEL

1	TOTAL	
1.1	UNIT	L – m3 – kg – lb – GAL – USGAL – bbl – (no unit)
1.2	DECIMALS	0 – 0.1 – 0.02 – 0.003
1.3	K-FACTOR	0.000010 – 9999999
1.4	K-FACTOR DECIMALS	0 – 0.1 – 0.02 – 0.003 – 0.003 – 0.0004 – 0.00005 – 0.000006
2	RATE (flowrate)	
2.1	UNIT	mL – L – m3 – g – kg – ton – GAL – bbl – lb – cf – (no unit)
2.2	TIME	/sec – /min – /hour – /day
2.3	DECIMALS	0 – 0.1 – 0.02 – 0.003
2.4	K-FACTOR	0.000010 – 9999999
2.5	K-FACTOR DECIMALS	0 – 0.1 – 0.02 – 0.003 – 0.003 – 0.0004 – 0.00005 – 0.000006
3	METER (flowmeter)	
3.1	SIGNAL	COIL – REED – NPN – PNP – NAMUR
4	A-OUT (analog output)	
4.1	OUTPUT	enable – disable
4.2	RATE-MIN (4mA)	0.000 – 9999999
4.3	RATE-MAX (20mA)	0.000 – 9999999
4.4	TUNE-MIN (4mA)	0000 – 9999
4.5	TUNE-MAX (20mA)	0000 – 9999
5	D-OUT (digital or pulse output)	
5.1	MODE	off – long – inter – short
5.2	DECIMALS	0 – 0.1 – 0.02 – 0.003
5.3	AMOUNT	0.000 – 9999999

6 COMM (Modbus communication)			
6.1	MODE		off – ascii – rtu
6.2	SPEED		1200 – 2400 – 4800 – 9600 – 9600 HP – 19200 – 38400 – 57600
6.3	DATABITS		7 bits – 8 bits
6.4	PARITY		none – even – odd
6.5	ADDRESS		1...247
6.6	DELAY (transmission)		0 ... 255ms
7 OTHER			
7.1	MODEL		BASIC72
7.2	SOFTWARE VERSION		03.06.xx
7.3	SERIAL NO		xxxxxxx
7.4	PIN		0000 – 9999
7.5	BL BACKLIGHT		off – on

3.3.2 MENU 1 – TOTAL



Note !

Total and flowrate are configured independently.

Both have their own K-factor and measurement unit.

Example: Calculating the K-factor.

To manually calculate the K-factor to enter for total or flowrate, follow this example:

Assume that the flowmeter generates 65.231 pulses per US gallon and the required measurement unit is cubic foot / ft³. A cubic foot consists of 7.48052 gallon which implies 487.9618 pulses per cubic feet. So, the K-Factor to enter is 487.9618.

1 TOTAL		
1.1	UNIT	This setting determines the measurement unit for (Accumulated) Total and the scaled pulse output. The following can be selected: L– m3 – kg – LB – GAL – USGAL – bbl – (no unit).
1.2	DECIMALS	The decimal point determines for Total and Accumulated Total the number of digits following the decimal point. The following can be selected: 0 – 0.1 – 0.02 – 0.003
1.3	K-FACTOR	With the Total K-Factor, the flowmeter pulse signals are converted to a total unit. The Total K-Factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 1.1). Use SETUP 1.4 to set the decimal point. The more accurate the Total K-Factor, the more accurate the functioning of the system will be.
1.4	K-FACTOR DECIMALS	This decimal point determines for K-Factor (SETUP 1.3) the number of digits following the decimal point. The following can be selected: 0 – 0.1 – 0.02 – 0.003 – 0.003 – 0.0004 – 0.00005 – 0.000006

3.3.3 MENU 2 – FLOWRATE



Caution !

Changes to SETUP 2.1 Unit, SETUP 2.2 Time unit and SETUP 2.3 Decimals have an effect on the analog output settings of SETUP 4.2 Rate Min and SETUP 4.3 Rate Max. Therefore it is best practice to first determine the required settings for the flowrate!

2		FLOWRATE
2.1	UNIT	This setting determines the measurement unit for flowrate. The following can be selected: mL – L – m3 – g – kg – ton – GAL – bbl – lb – cf – none
2.2	TIME	The flowrate can be calculated per /sec - /min - /hour - /day.
2.3	DECIMALS	This setting determines for flowrate the number of decimals. The following can be selected: 0 – 0.1 – 0.02 – 0.003
2.4	K-FACTOR	With the Flowrate K-factor, the flowmeter pulse signals are converted to a flowrate unit. The Flowrate K-factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 2.1). The more accurate the K-factor, the more accurate the functioning of the system will be. Use SETUP 2.5 to set the decimal point. The more accurate the Total K-Factor, the more accurate the functioning of the system will be.
2.5	K-FACTOR DECIMALS	This decimal point determines for K-Factor (SETUP 2.4) the number of digits following the decimal point. The following can be selected: 0 – 0.1 – 0.02 – 0.003 – 0.003 – 0.0004 – 0.00005 – 0.000006





3.3.4 MENU 3 – METER (FLOWMETER)

3		METER (flowmeter)			
3.1	SIGNAL	The B-CONNECTED is able to handle several types of input signal. The type of flowmeter pickup / signal is selected with SETUP 3.1.			
	TYPE OF SIGNAL	EXPLANATION	RESISTANCE	FREQ. / mVpp	REMARK
	NPN	NPN input	100 kΩ pull-up	max. 6 kHz.	(open collector)
	REED	Reed-switch input	1 MΩ pull-up	max. 120 Hz.	
	PNP	PNP input	47 kΩ pull-down	max. 6 kHz.	
	NAMUR	NAMUR input	820 Ω pull-down	max. 4 kHz.	External power required
	COIL	Coil input	-	min. 30 mVpp	-

3.3.5 MENU 4 – A-OUT (ANALOG OUTPUT)

An analog 4-20mA signal is generated according to the flowrate with a 10 bits resolution. The settings for Flowrate (SETUP-menu 2) influence the analog output directly and should be configured first. The relationship between rate and analog output is set with the following functions.

4		A-OUT (analog output)
4.1	OUTPUT	If the analog output is not used, it can be disabled to minimize power consumption to save battery life. When the output is disabled, the current will be less than 3.4mA and the unit can still be supplied from this signal (provided a power supply is connected). The following can be selected: enable – disable <div style="display: flex; align-items: center;"> Note ! </div> <i>While powering-up the loop, the initial current is approx. 3.3mA. When the output is enabled, it can take a few seconds to settle.</i>


4.2	RATE-MIN (4mA)  Note !	Enter here the flowrate at which the output should generate the minimum signal (4mA) – in most applications at flowrate “0”. The number of decimals displayed depend upon SETUP 2.3. The time and measuring units (L/min for example) are dependent upon SETUP 2.1 and SETUP 2.2 and are displayed during editing. <i>If desired, you can program the analog output 'up-side-down'. The 4mA represents the maximum flow rate. For example do enter 800 L/min.</i>
4.3	RATE-MAX (20mA)  Note !	Enter here the flowrate-at which the output should generate the maximum signal (20mA) – in most applications at maximum flow. The number of decimals displayed depend upon SETUP 2.3. The time and measuring units (L/min for example) are dependent upon SETUP 2.1 and SETUP 2.2 and are displayed during editing. <i>If desired, you can program the analog output 'up-side-down'. The 20mA represents the minimum flow rate. For example do enter 0 L/min.</i>
4.4	TUNE MIN (4mA)  WARNING	The initial minimum analog output value is 4mA. However, this value might differ slightly due to ambient influences such as temperature for example. The 4mA value can be tuned precisely with this setting. Before tuning the signal, be sure that the analog signal is not being used for any application! After pressing SELECT+CLEAR, the current will be about 4mA. The current can be increased / decreased with the arrow-keys and is directly active. Press SELECT+CLEAR to store the new value.
4.5	TUNE MAX (20mA)  WARNING	The initial maximum analog output value is 20mA. However, this value might differ slightly due to ambient influences such as temperature for example. The 20mA value can be tuned precisely with this setting. Before tuning the signal, be sure that the analog signal is not being used for any application! After pressing SELECT+CLEAR, the current will be about 20mA. The current can be increased / decreased with the arrow-keys and is directly active. Press SELECT+CLEAR to store the new value.

3.3.6 MENU 5 – D-OUT (DIGITAL OR PULSE OUTPUT)




Note !

- The isolated transistor output has a maximum output frequency of 33Hz when externally powered and 5Hz when battery powered. Limit the number of pulses to several times an hour to preserve battery power.
- To ensure correct operation, only use the following settings for SETUP 5.1 – Mode:
 - Battery powered: LONG (5 Hz)
 - Externally powered: INTER (33 Hz) and LONG (5 Hz)

5	D-OUT (digital or pulse output)	
5.1	MODE	The following modes of operation are used to disable or to set a pulse output length. <ul style="list-style-type: none"> • Off: the output is switched-off. • Long: represents a pulse length of 100ms (max. 5Hz.) • Inter: represents a pulse length of 15ms (max. 33Hz) • Short: represents a pulse length of 5ms (max. 100Hz.)
5.2	DECIMALS  Note !	The decimal point determines for AMOUNT (SETUP 5.3) the number of digits following the decimal point. The following can be selected: 0 – 0.1 – 0.02 – 0.003 <i>If the frequency should go out of range – when the flowrate increases for example – an internal buffer will be used to “store the missed pulses”: As soon as the flowrate slows down, the buffer will be “emptied”. It might be that pulses will be missed due to a buffer-overflow, so it is advised to program this setting within its range!</i>

5.3	AMOUNT	One pulse is generated every X-quantity measured. If for example you want 100 pulses per gallon: do enter 0.01 GAL (this means one pulse every 0.01 GAL, so 100 pulses per gallon).
-----	--------	---

3.3.7 MENU 6 – COMM (MODBUS COMMUNICATION)

6 COMM (MODBUS COMMUNICATION)		
6.1	MODE	This setting is used to configure the communication mode of your device on the Modbus communications bus. The following modes can be selected: OFF – ASCII – RTU
6.2	SPEED	This setting is used to set the baud rate and should match the speed used on the communications bus. The following communication speeds can be selected: 1200 – 2400 – 4800 – 9600 – 9600HP – 19200 – 38400 – 57600  <i>Note !</i> <i>Communication speeds from 9600HP and upwards are more power consuming. When used with battery power, it is advised to set the speed at 9600 or lower.</i>
6.3	DATABITS	This setting is used to configure the number of data bits and should match the number used on the communications bus. Select 8 bit for Modbus RTU and 7 or 8 bits for Modbus ASCII.
6.4	PARITY	This setting is used to configure the parity mode and should match the parity mode used on the communications bus. Available settings are ODD – EVEN – NONE.
6.5	ADDRESS	This setting is used to configure the bus address of your device on the Modbus communications bus. This address can vary from 001-247.
6.6	DELAY (transmission)	This setting is used to configure a delay time between 0 and 255ms that is inserted between receiving a Modbus message and transmitting the answer to the Modbus master.

3.3.8 MENU 7 – OTHER

7 OTHER		
7.1	MODEL	For support and maintenance it is important to have information about the characteristics of the B-CONNECTED. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations.
7.2	SOFTWARE VERSION	
7.3	SERIAL NO.	
7.4	PIN	All SETUP values can be password protected. This protection is disabled with value 0000 (zero). A 4 digit PIN can be programmed, for example 1234.
7.5	BL BACKLIGHT	This submenu is used to switch the backlight on or off. Due to a lack of sufficient power, the backlight does not come on at battery power only.

4 INSTALLATION



4.1 GENERAL DIRECTIONS



Caution !



- Mounting, electrical installation, start-up and maintenance of this instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.
- The B-CONNECTED may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.
- Take careful notice of the “Safety rules, instructions and precautionary measures” at the front of this manual.

4.2 INSTALLATION / SURROUNDING CONDITIONS

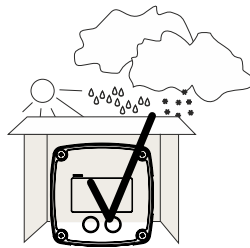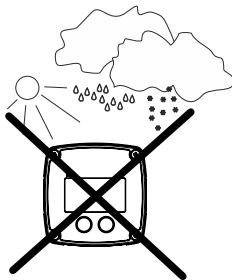

Take the relevant IP classification of the enclosure into account (see identification plate). Even an enclosure rated for IP67 / TYPE 4(X) should NEVER be exposed to strongly varying (weather) conditions.

When used in very cold surroundings or varying climatic conditions, inside the instrument case, take the necessary precautions against moisture.

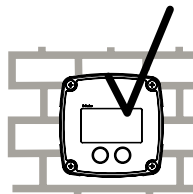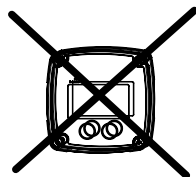

Mount the B-CONNECTED on a solid structure to avoid vibrations.

Relative humidity:	< 90% RH
Outdoor use:	suitable for outdoor use
IP and NEMA rating:	IP65, NEMA TYPE 4X
Supply voltage fluctuation:	+/- 10% unless stated otherwise
Means of protection:	Class II
Over-voltage category:	II
Pollution degree:	2 (internal environment), 3 (external environment)
Ambient temperature:	-20 °C to +60 °C, -4 °F to + 140 °F
Altitude:	up to 2000 m

4.3 HANDLING THE B-SERIES ENCLOSURE

4.3.1 IDENTIFICATION

Identification label

To identify your B-Series device, all enclosures have a weatherproof identification label placed on the outside of the unit.

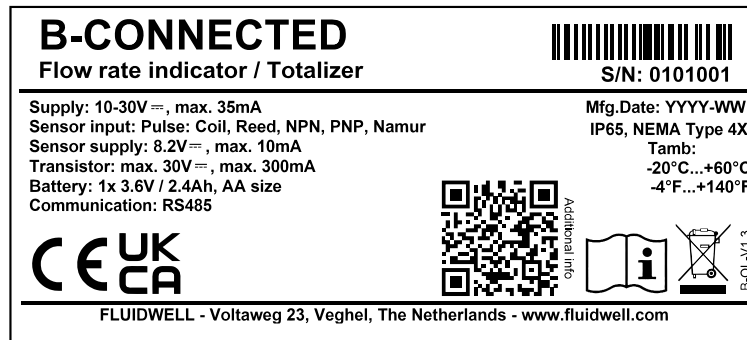


Fig. 6: Example external label with general data.

Installation label

A second label is located on the inside and shows additional installation data.


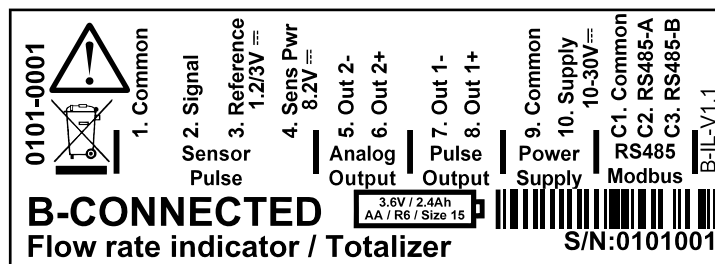


Fig. 7: Example internal label with terminal information.

Serial number and year of production

The serial number can be reviewed on the identification label or in SETUP-menu Others.

The production date is shown on the identification label.

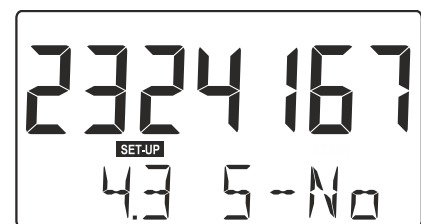

4.4 MECHANICAL INSTALLATION

4.4.1 DIMENSIONS – ENCLOSURE


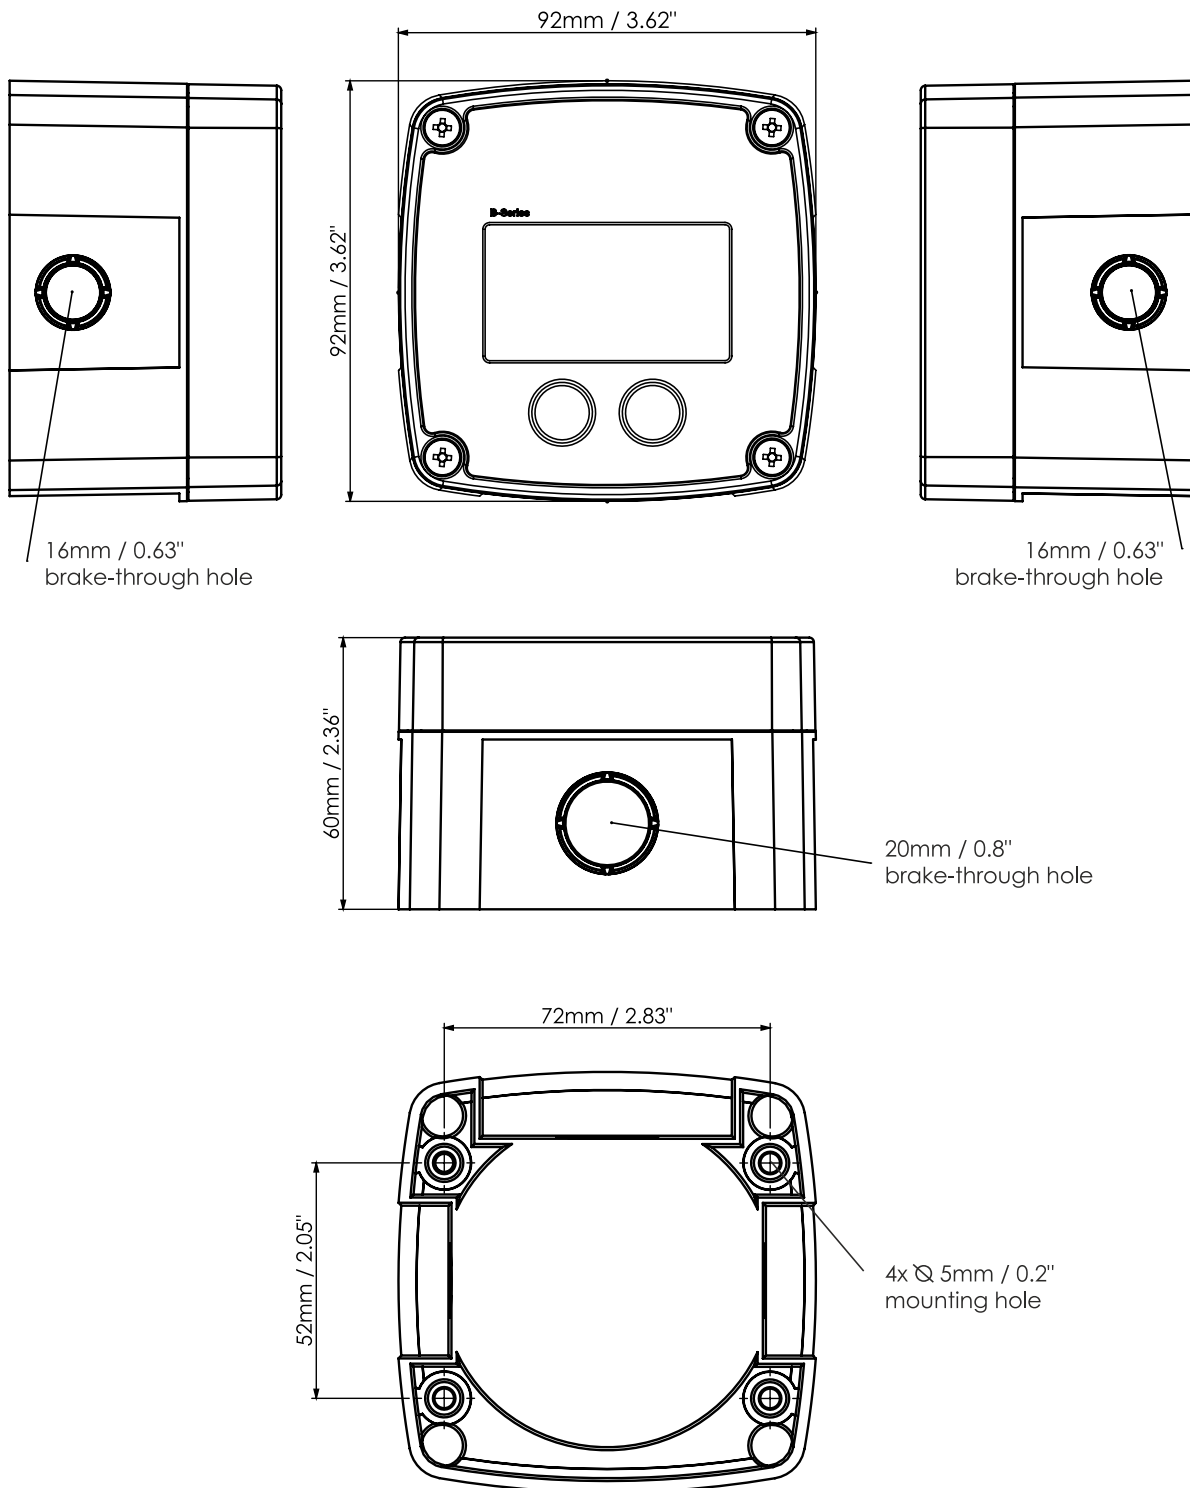


Fig. 8: Dimensions enclosure

4.4.2 MOUNTING

Wall mounting

The enclosure can be wall mounted with screws using the four available mounting holes.

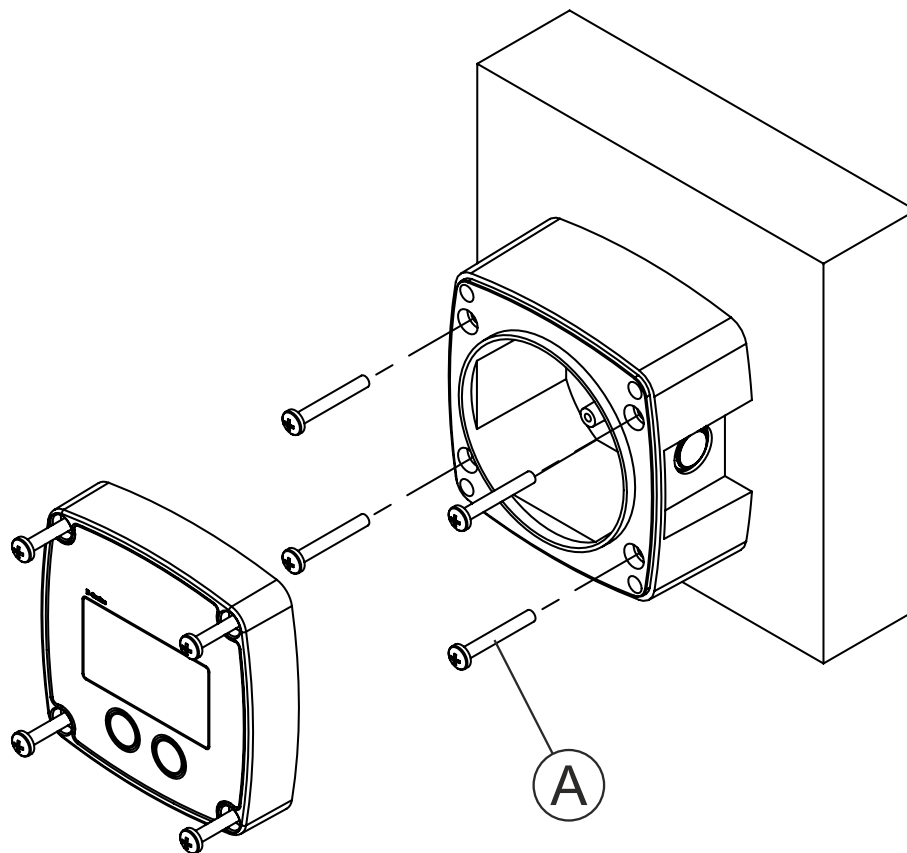

A: 4x screw / bolt:


- Head diameter: 6-8mm / 0.24"- 0.31"
- Shaft diameter: maximum 5mm / 0.2"
- Shaft length: minimum 50mm / 2"
- Use the correct plugs if applicable

Note: The rear-enclosure part can be rotated in steps of 90°, enabling cable entry from any side.

Fig. 9: Installation – Wall mounted

Sensor mounting

The enclosure can be mounted on a sensor by using the mounting hole at the bottom and a lock nut.

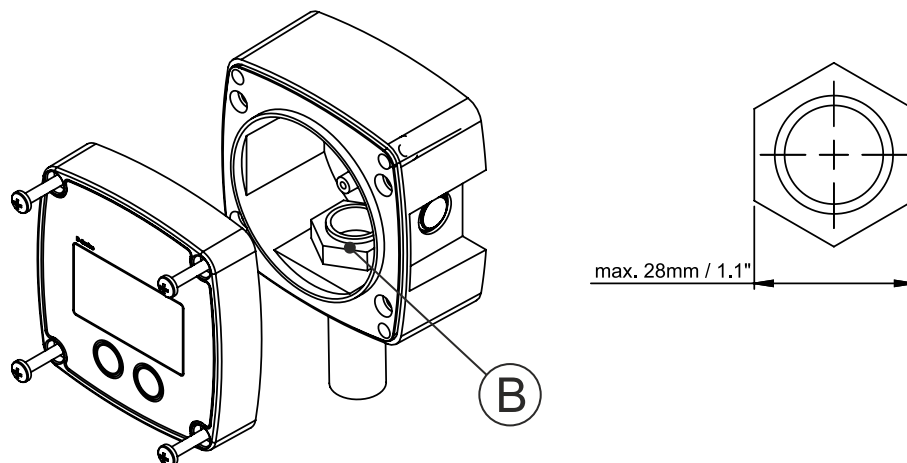

B: Tube diameter: max. 20mm / 0.79". Max. nut height 25mm / 1"

Fig. 10: Installation – Sensor mounted

4.5 ELECTRICAL INSTALLATION



DO NOT OPEN AN INSTALLED ENCLOSURE WHEN CIRCUITS ARE ALIVE.



- Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the B-CONNECTED, the installer has to discharge himself by touching a well-grounded object.
 - The B-CONNECTED must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).
-
- Use (separate) cable glands with effective IP65 (or better) seals for all wires.
 - For unused cable entries, fit blind plugs with effective IP65 (or better) seals.
 - Use effective screened cable for the input/output signals and provide grounding of its screen to the “⊥” terminal (for isolated signals the corresponding – terminal) or at the external device itself, whichever is appropriate to the application. Be careful not to create ground loops!
 - The cable entry plugs mounted into the enclosure shall comply with the requirements of the type of protection used.

4.5.1 ELECTRICAL SAFETY

- In case this instrument is connected to a supply by means of a permanent connection a switch or circuit-breaker shall be included in the installation. This shall be in close proximity to the equipment and within easy reach of the operator. It shall be marked as the disconnecting device for the equipment. Furthermore, a protective over-current device with a maximum rating of 0.5A (e.g. fuse or circuit breaker) must be inserted in the positive supply line in safe area.
- The external power supply must be an approved ELV source, insulated from AC mains by double / reinforced insulation per IEC 61010-1. All other inputs and outputs shall at least be reinforced insulated from mains.
- The installation must comply with (inter)national requirements and local ordinances. Within the United States all field wiring must conform to the National Electric Code, NFPA 70. Within Canada all field wiring must conform to the Canadian Electrical Code for installations within Canada.

4.5.2 SENSOR SUPPLY VOLTAGE

Terminal 3: Reference voltage: 1.2V DC - 3.2V DC

Terminal 3 provides a reference voltage of 3.2 V DC (coil signals 1.2V) which functions as a limited supply voltage for the signal output of the flowmeter.



Note !

This voltage MAY NOT be used to power the flowmeters electronics, converters etc, as it will not provide adequate sustained power ! All energy used by the flowmeters pick-up will directly influence the battery life-time. It is strongly advised to use a “zero power” pickup such as a coil or reed-switch when operating without external power. It is possible to use some low power NPN or PNP output signals, but the battery life time will be significantly reduced (consult your distributor).

Terminal 4: Sensor supply: 8.2V DC

This terminal offers a supply derived from the input supply. The output voltage of terminal 4 is a fixed 8.2V DC.



Note !

*The 8.2V DC sensor supply requires an external supply to be connected.
Maximum output current: 10mA.*

4.6 TERMINAL CONNECTORS

The following terminal connectors are available:

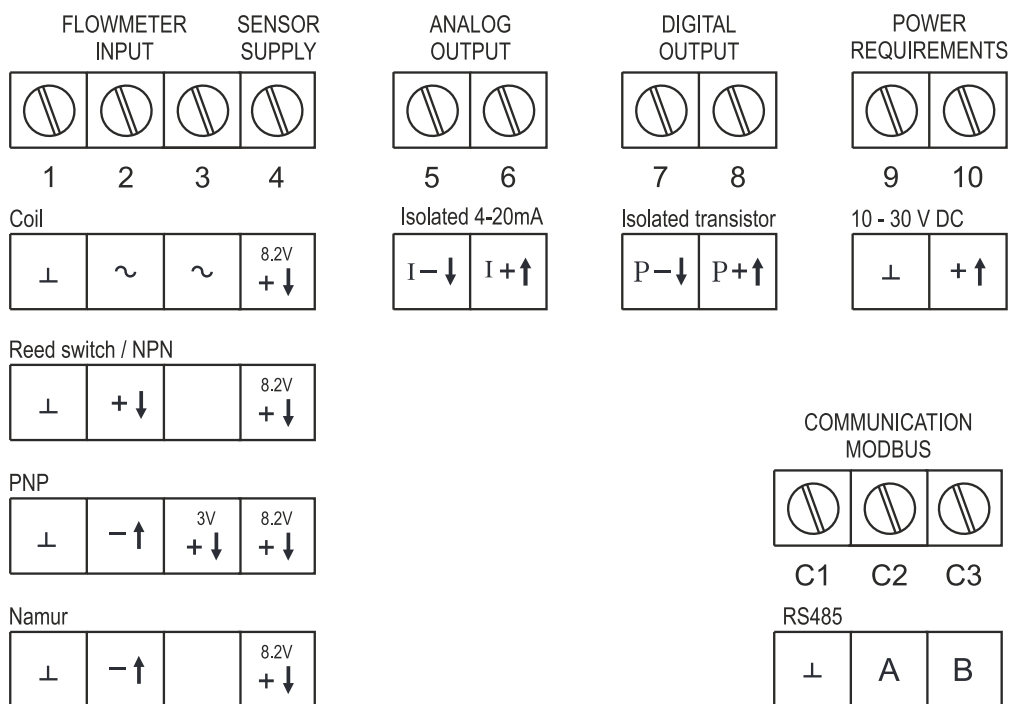


Fig. 11: Terminal connectors

4.7 TERMINAL CONNECTIONS

4.7.1 TERMINAL 1-4: FLOWMETER INPUT

Two basic types of flowmeter signals can be connected to the unit: pulse or sine-wave (coil). The screen of the signal wire must be connected to the common ground terminal (unless earthed at the sensor itself).

The sensor output of the flowmeter should match with the selected flowmeter input signal at SETUP 3.1. See paragraph 3.3.4 for more information.

Sine-wave signal (Coil)

The B-CONNECTED is suitable for use with flowmeters which have a coil output signal. The minimum sensitivity level is 30mVpp.

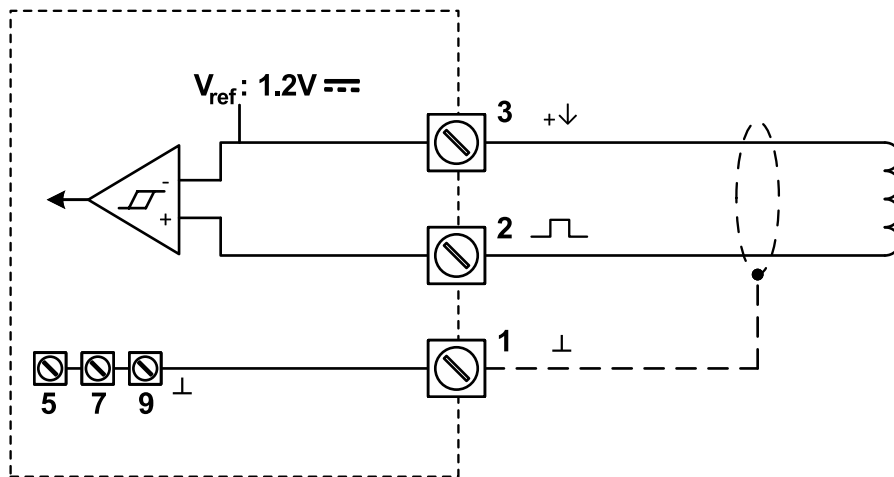


Fig. 12: Terminal connections – Coil signal input

Pulse-signal NPN

The B-CONNECTED is suitable for use with flowmeters which have a NPN output signal. For reliable pulse detection, the signal should be above 1.4V or below 1.0V under all circumstances. It is advised to use a sensor which is normally open and is closed for a small time (less power consumption).

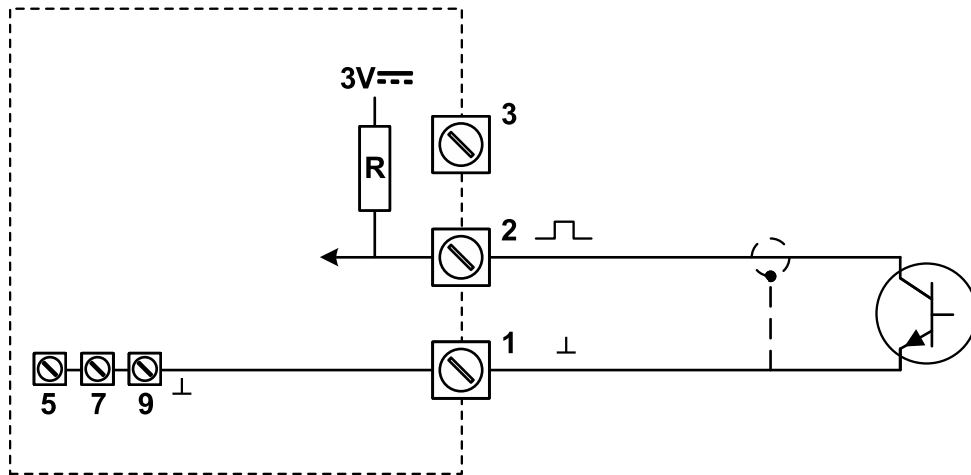


Fig. 13: Terminal connections – NPN signal input

Pulse-signal PNP

The B-CONNECTED is suitable for use with flowmeters which have a PNP output signal. 3.0V is offered on terminal 3 which has to be switched by the sensor to terminal 2 (SIGNAL). For reliable pulse detection, the signal should be above 1.4V or below 1.0V under all circumstances. It is advised to use a sensor which is normally open and is closed for a small time (less power consumption). In case of an active signal, the maximum voltage is 30V DC.

Terminal 4 can offer a sensor supply voltage of 8.2V DC with external power supply.

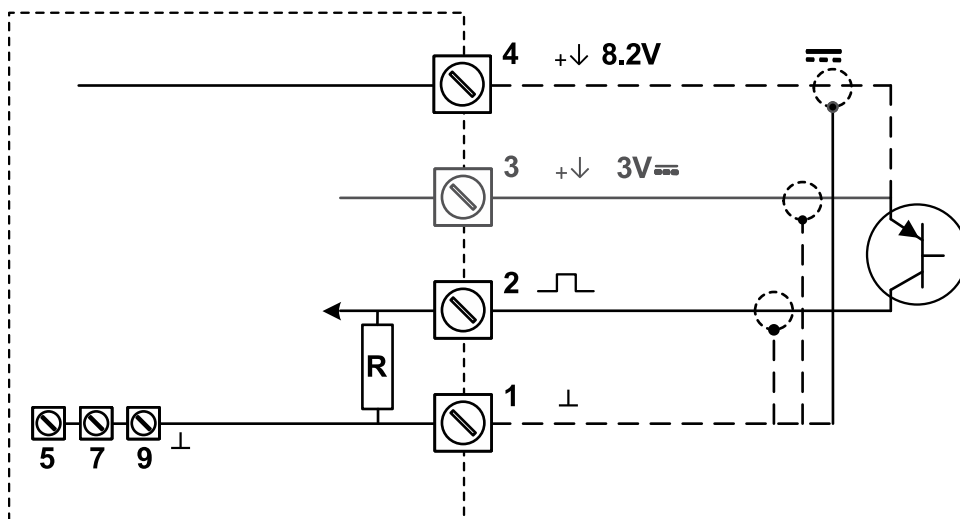


Fig. 14: Terminal connections – PNP signal input

Reed-switch

The B-CONNECTED is suitable for use with flowmeters which have a reed-switch. Make sure the contact resistance of the reed switch is less than 10k Ohm.

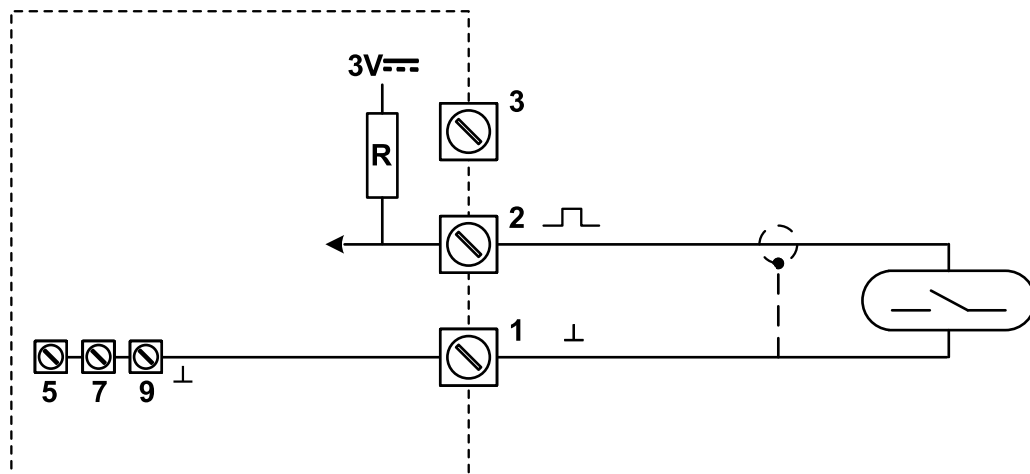


Fig. 15: Terminal connections – Reed-switch signal input

NAMUR-signal

The B-CONNECTED is suitable for flowmeters with a NAMUR signal. The B-CONNECTED is able to power the NAMUR sensor via the 8.2V sensor supply (terminal 4).

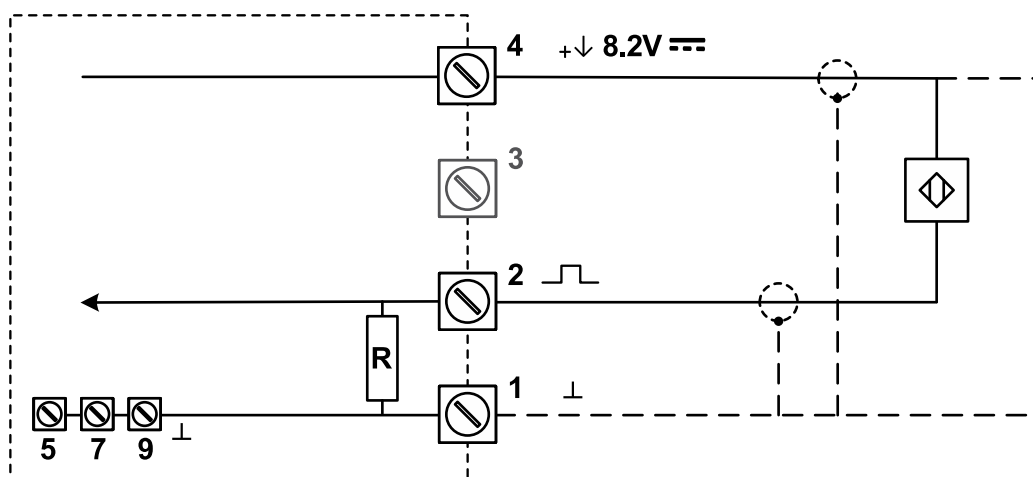


Fig. 16: Terminal connections – NAMUR signal input

4.7.2 TERMINAL 5-6: ISOLATED ANALOG OUTPUT

The functionality of the analog output is programmed through the A-OUT menu (SETUP-menu 4). See paragraph 3.3.5 for more details.

The isolated analog output generates a 4-20mA output signal proportional to the measured flowrate and does not power the B-CONNECTED. When the output is disabled, a constant current of 3.3mA is generated.

The isolated analog output is passive and requires an external 6-30V DC supply to function with a maximum driving capacity of 900 ohm @ 24V DC (24-6V/20mA). The output presents a functional (basic) isolation, with a maximum voltage difference between separated circuits of 100V.

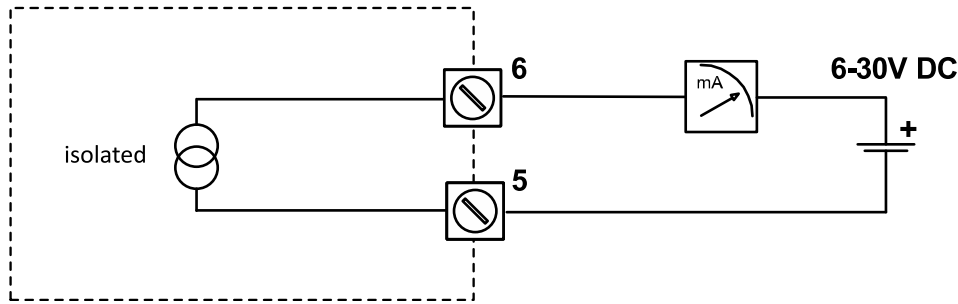


Fig. 17: Terminal connections – 4-20mA analog output



Note !

- The isolated analog output does not power the B-CONNECTED. Make sure a battery is inserted or an external power supply is connected.
- When battery powered and the isolated analog output is not being used, disable the output to preserve battery power.
- The terminal connections of the isolated analog output are polarity sensitive.

4.7.3 TERMINAL 7-8: ISOLATED DIGITAL OUTPUT

The functionality of the digital output is programmed through the D-OUT menu (SETUP-menu 5). See paragraph 3.3.6 for more details.

The isolated transistor output has a maximum driving capacity of 50mA @ 30V DC and the maximum output frequency is 33Hz when externally powered and 5Hz when battery powered. The output presents a functional (basic) isolation, with a maximum voltage difference between separated circuits of 100V.

Utilizing the isolated transistor output while battery powered is possible, but when the output is sending out pulses at maximum frequency continuously, this will have a major influence on the battery lifetime. For prolonged operation, best practice is to limit the number of pulses to several times an hour and if the output is not used, set the Mode to disabled.

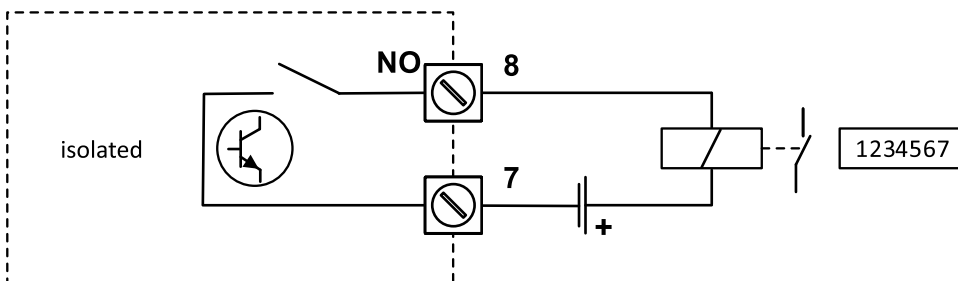


Fig. 18: Terminal connections – Transistor output



Caution !

To ensure correct operation of the isolated transistor output, only use the following settings for SETUP 5.1 – Mode:

- Battery powered: LONG (5 Hz)
- Externally powered: INTER (33 Hz) and LONG (5 Hz)

Limit the number of pulses to several times an hour to preserve battery power.

4.7.4 TERMINAL 9-10: POWER SUPPLY

Connect an external power supply of 10-30VDC to these terminals. The maximum current is 35mA.

When power is applied to these terminals, the sensor voltage on terminal 4 becomes available, discharge of the internal battery is disabled and the backlight can be used.

4.7.5 TERMINAL C1-C3: RS485 PORT

The RS485 port is available to read-out runtime values and configure the B-CONNECTED via a Modbus network. The maximum cable length is 100 meters and the interface is designed to work without termination resistors. For better immunity, use twisted pair, shielded cable and preferably connect the shield at the Modbus master side.

Communication while battery powered is possible, but communication interval, length and speed have a major influence on its lifetime. For prolonged operation, best practice is to limit readout to once every hour.

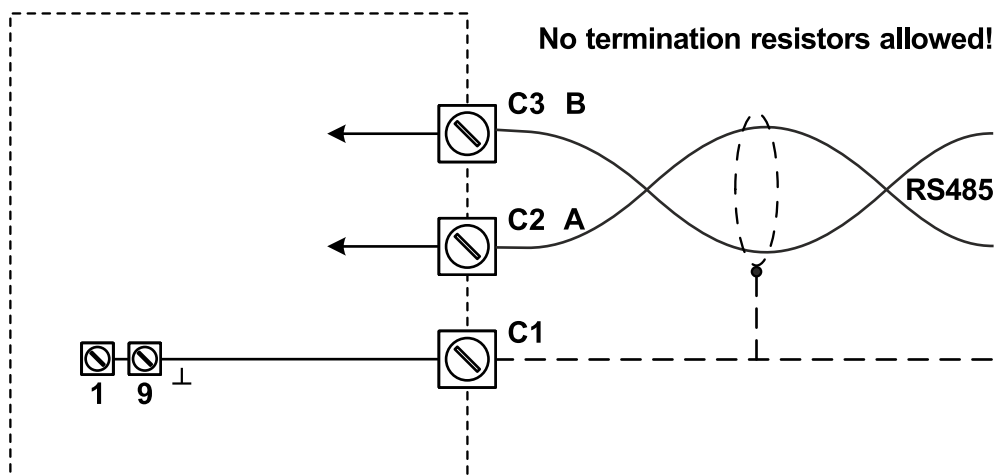


Fig. 19: Terminal connections – RS485 port connection



- Do not use termination resistors on the RS485 bus as the interface does not have enough power to drive these and operation of the B-CONNECTED is compromised.
- When battery powered, reduce communication interval and length significantly to preserve battery power.
- The RS485 interface is not isolated from the external power supply or sensor input.

To support 'configuration on the desk' a special RS485 communications cable that connects to a PC / laptop is available and can be ordered separately, as shown below.

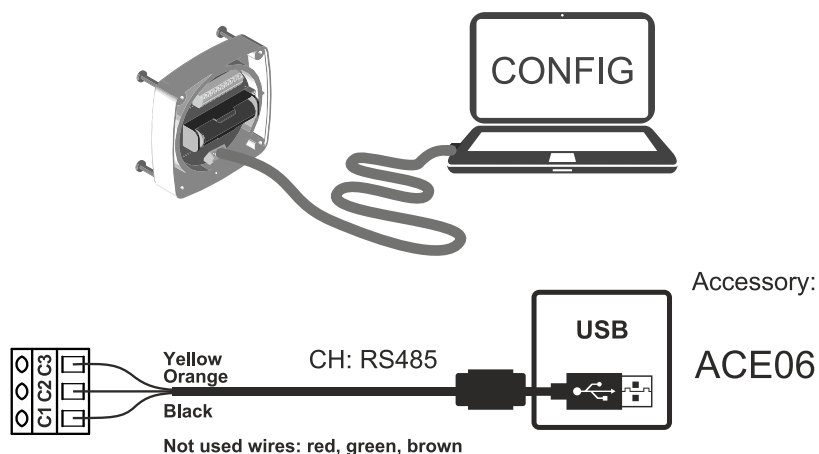


Fig. 20: Terminal connections – RS485 port



Note !

- Accessory ACE06 is supplied with a fitted terminal connector, which should be removed when used in B-Series applications. Insulate the red wire and connect the black, orange and yellow wires to terminals C1-C3 as indicated. Make sure the USB cable is disconnected during installation to prevent any short circuit.
- This cable **does not** supply the B-CONNECTED. Make sure a battery is inserted or an external power supply is connected and the unit is running.

5 MAINTENANCE

5.1 GENERAL DIRECTIONS



- Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions. Take careful notice of the “Safety rules, instructions and precautionary measures” in the front of this manual.
- The B-CONNECTED may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.
- Ensure that the measuring system is correctly wired up according to the wiring diagrams. The housing may only be opened by trained personnel.
- Take careful notice of the “Safety rules, instructions and precautionary measures” in the front of this manual.

The B-CONNECTED does not require special maintenance unless it is used in low-temperature applications or surroundings with high humidity (above 90% annual mean). It is the users responsibility to take all precautions to dehumidify the internal atmosphere of the B-CONNECTED in such a way that no condensation will occur, for example by placing dry silica-gel sachet in the casing just before closing it. Furthermore, it is required to replace or dry the silica gel periodically as advised by the silica gel supplier.

Battery life-time

The life-time of the battery is influenced by several issues:

- Isolated digital output: for prolonged operation, limit the number of pulses to several times an hour and if the output is not used, set it to disabled.
- Isolated analog output signal: be sure that the analog output is disabled if not in use, as this has a major influence on the battery life-time.
- RS485 communication: setting the speed to 9600 is most power efficient (speeds 9600 HS and above consume more power). Limiting the record length and poll frequency further reduces current consumption. Best practice is to limit readout to once every hour.
- Low temperatures; the available power will be less due to battery chemistry.
- NPN and PNP inputs consume more energy than coil inputs.
- High input frequency.



Note !

It is strongly advised to use only necessary functions.

Check periodically

- The condition of the enclosure, cable glands and front panel.
- The input/output wiring for reliability and aging symptoms.
- The process accuracy. As a result of wear and tear, re-calibration of the flowmeter might be necessary. Do not forget to re-enter any subsequent K-factor alterations.
- The indication for low-battery. Replacement battery: see technical specifications.
- Clean the enclosure with a lint-free cloth, soaked with a mild soap solution or fresh water.

5.2 INSTRUCTIONS FOR REPAIR

This product cannot be repaired by the user and must be replaced with an equivalent certified product. Repairs are only allowed to be carried out by the manufacturer or his authorized agent.

Repair policy

If you have any problem with your product and you wish to have it repaired, please follow the procedure below:

- a. Obtain a Return Material Authorization (RMA) from your supplier or distributor. Together with the RMA, you need to complete a repair form to submit detailed information about the problem.
- b. Send the product, within 30 days, to the address provided with the RMA. The physical return of your repair can only take place after the authorization of your repair application, as confirmed by the RMA number.

If the product is within the warranty period and the reported problem falls under the warranty conditions, the product will be repaired or exchanged and returned within three weeks. Otherwise, you will receive a repair estimate.

5.3 BATTERY REPLACEMENT

5.3.1 SAFETY INSTRUCTIONS



- Handle the battery with care. A mistreated battery can become unsafe. Unsafe batteries can cause (serious) injury to persons.
- Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained persons authorized by the operator of the facility. Persons must read and understand this manual before carrying out its instructions.




The batteries are used to store electrical energy. The battery is a high-power battery which must be treated carefully. When the battery is mistreated or damaged, there is a risk of a fire, an explosion and serious burns.

1. Only use a battery which is applicable for the intended use.
2. Mind that you cannot switch off a battery.
3. Make sure, it is safe to work on the battery system.
4. Handle the battery with the utmost care to prevent a short circuit and damage.
5. Do not recharge, crush, disassemble, incinerate, heat above its rated temperature or expose the contents to water.
6. Dispose of the battery in accordance with the (inter)national, the manufacturer's and the plant owner's standards and regulations.

Change the battery:

- a) Obey the battery safety instruction.
- b) Open the B-Series, remove and keep the bolts (1).
- c) Hold the cover (2) and carefully remove the battery (3) from the battery holder (4). The holder can either be made of plastic (as indicated) or metal brackets.
- d) Inspect a plastic battery holder for signs of deterioration.
- e) Mind the polarity! Install a new battery (3) in the holder (4).
- f) Make sure, the display comes on.
- g) Install the cover (2) with the bolts (1).

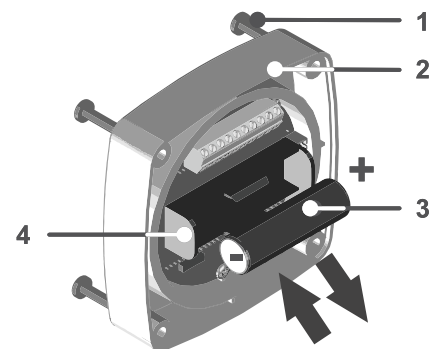

Battery specification

Primary, non-rechargeable, Lithium metal Thionyl Chloride (Li/SOCl₂), 1x3.6V/2.4Ah, AA size (IEC-R6, ANSI size15).

5.3.2 DISPOSAL OF BATTERIES



- Batteries pose an environmental hazard.
- Do not dispose of as general waste or incinerate.
- Return used batteries to a recycling point.

Appendix A. TECHNICAL SPECIFICATION

General

Display	
Type	High intensity numeric and alphanumeric LCD, UV-resistant, with bright backlight. <i>When only battery or loop powered, the backlight is not operational.</i>
Dimensions	54 x 29mm (2.13" x 1.14").
Digits	Seven 12mm (0.47") and eleven 7mm (0.28") digits. Various symbols and measuring units.
Refresh rate	During operation 8 times/sec, switches to 1 time/sec after 30 sec without operation.

Enclosures	
Material	GRP, UV-resistant and flame retardant.
Sealing	EPDM gasket.
Control keys	Two industrial micro-switch keys. UV-resistant Polyester keypad.
Rating	IP65, NEMA Type 4X
Dimensions	92 x 92 x 60mm (3.62" x 3.62" x 2.36") - W x H x D.
Weight	200 gram / 0.44 lbs.
Cable entries	Knock-out type. Side: 2x 16mm/0.63" Bottom: 1x 20mm/0.79" <i>Note: the rear-enclosure can be rotated in steps of 90°.</i>

Operating temperature	
Ambient	-20°C to +60°C (-4°F to +140°F).

Power requirements	
External power supply	10 - 30V DC. Max consumption: 35mA. <i>The power supply will also supply the backlight and the 8.2V DC sensor supply.</i>
Battery	Primary, non-rechargeable, Lithium metal Thionyl Chloride (Li/SOCI ₂), 1x3.6V/2.4Ah, AA size (IEC-R6, ANSI size15). Life-time depends upon settings and configuration - up to approx. 2 years. <i>Battery replacement: only with identical specification!</i>
Loop powered	Not available.

Sensor excitation	
Standard	Terminal 3: 3V DC reference voltage for pulse signals, 1.2V DC for coil pick-up. Max. 100µA. <i>This is not a real sensor supply. Only suitable for sensors with a very low power consumption like coils (sine wave) and reed-switches.</i>
With external power supply	Terminal 4 : 8.2V DC, max. 10mA.

Terminal connections	
Type	Fixed terminal strip. Wire max. 1.5 mm ² .


Data protection	
Type	FRAM backup of all settings. Backup of running totals every minute. Data retention at least 10 years.
Password	Configuration settings can be password protected.

Directives and Standards	
EMC	EN 61000-6-2 BS 61000-6-2 EN 61000-6-3 BS 61000-6-3 EN 61326-1 BS 61326-1 FCC 47 CFR part 15
RoHS	EN 50581 BS EN 50581 EN IEC 63000 BS EN IEC 63000
IP & TYPE	EN 60529 NEMA 250

Input

Flowmeter	
Type P	Coil / sine wave 30mVpp, NPN, PNP, reed switch, NAMUR.
Frequency	Minimum 0Hz - maximum 6kHz for total and flow rate. Maximum frequency depends on signal type.
K-Factor	0.000001 - 9,999,999 with variable decimal position.

Output


Digital output	
General	Transmitting accumulated total (scaled pulse).
Frequency	User selectable: max. 100Hz (5msec pulse length), max. 33Hz (15msec pulse length) or max. 5Hz (100msec pulse length).
Type	Isolated transistor output - 50mA - 30V @ 25°C.
Frequency limitation	Max freq: 33Hz with external power, 5Hz with battery supply
 Note !	<i>Due to the limited output frequency of the isolated output, only settings INTER and LONG are valid for SETUP 5.1 – Mode (setting SHORT will not function correctly).</i>
Isolation	Functional (basic) isolation only. Max. voltage difference between separated circuits: 100V.


Analog output	
General	Transmitting flow rate.
Type	Isolated 4 - 20mA output – not loop powered
Supply voltage	6V (lift-off voltage) – 30V DC
Max load	900 Ohm @ 24V DC (24V - 6V / 20mA)
Isolation	Functional (basic) isolation only. Max. voltage difference between separated circuits: 100V.
Accuracy	10 bit. Error 0.5% @ 20°C (Typical 45ppm/°C). Can be scaled to any desired range.

Communication	
General	Reading display information, reading/writing all configuration settings
Type	Modbus ASCII/RTU – RS485 2-wire, bus termination not allowed
Speed	1200, 2400, 4800, 9600, 19200, 38400, 57600
Addressing	Maximum 247 addresses
Parity	None, Even, Odd
Databits	7 bits, 8 bits
Transmission delay	0 to 255ms

Operational

Operator functions	
Displayed information	<ul style="list-style-type: none"> Flow rate Total Accumulated total
Functions	<ul style="list-style-type: none"> Total can be reset to zero by pressing the CLEAR-key twice

Total	
Digits	7 digits.
Unit	L, m3, US gal, gal, bbl, kg, lb or none.
Decimals	0 - 1 - 2 or 3.
 Note !	<i>Total can be reset to zero.</i>

Accumulated total	
Digits	7 digits.
Unit / decimals	According to selection for total.
 Note !	<i>Accumulated total cannot be reset to zero.</i>

Flow rate	
Digits	7 digits.
Units	mL, L, m3, g, kg, ton, gal, bbl, lb, cf, none.
Decimals	0 - 1 - 2 or 3.
Time units	/sec - /min - /hr - /day.

Appendix B. PROBLEM SOLVING

In this appendix, several problems are included that can occur when the B-CONNECTED is going to be installed or while it is in operation.

Flowmeter does not generate pulses

Check:

- Signal selection SETUP 3.1.
- Pulse amplitude (paragraph 3.3.4).
- Flowmeter, wiring and connection of terminal connectors (paragraph 4.7.1).
- Power supply of flowmeter (paragraph 4.5.2).

Flowmeter generates "too many pulses"

Check:

- Settings for Total (SETUP 1) and Flowrate (SETUP 2).
- Type of signal selected with actual signal generated (paragraph 3.3.4),
- Sensitivity of coil input.
- Proper grounding of the B-CONNECTED, avoid ground loops.
- Use screened wire for flowmeter signals and connect screen to the ground input terminal of the flowmeter input.

Flowrate displays "0 / zero" while there is flow (total is counting)

Check:

- SETUP 2.2 / 2.4: are the K-factor and time unit correct?

Analog output does not function properly

Check:

- SETUP 4.1: is the function enabled?
- SETUP 4.2 / 4.3: are the flow-levels programmed correctly?
- SETUP 4.4 / 4.5: are the 4mA and 20mA tuned correctly?
- Connection of the external power-supply according to the specification.

Pulse output does not function

Check:

- SETUP 5.1 - mode: is the correct function selected?
- SETUP 5.1 - mode: is the external device able to recognize the selected pulse width and frequency?
- SETUP 5.2/5.3 - amount per "x" quantity: is the value programmed reasonable?

The password is unknown

If the PIN cannot be retrieved, there is only one possibility left: call your supplier.

ALARM

When the alarm flag starts to blink an internal alarm condition has occurred. Press the SELECT key several times to display the error code. The codes are:

0001 = display error
0002 = data-storage error
0004 = initialization error

When multiple alarms occur, the error code shown is the sum of the error codes as given above.
E.g. 0005 is a combination of error code 0001 and 0004.

If the alarm occurs more often or stays active for a long time, please contact your supplier.

Appendix C. MODBUS COMMUNICATION

General

The B-CONNECTED is fitted with the Modbus communication protocol and a RS485 interface. The tables below show the various variables that can be accessed through the communication. Currently, the function codes supported are:

- Function code 3 “Read Holding Registers” (4x references)
- Function code 16 “Preset Multiple Registers” (4x references)

The tables show the Modbus PDU addresses in a decimal format, followed by its hexadecimal representation (0x0000). When the PLC address range is required (4x references are typically used by PLCs), please use the holding registers addresses.

Datatypes

The following datatypes are used for Modbus communication with the B-CONNECTED:

DATA TYPE	NUMBER OF BYTES	NUMBER OF REGISTERS (16 BIT)	DESCRIPTION
char	1	1	8 bits ASCII character
uint16	2	1	16 bits unsigned integer
uint32	4	2	32 bits unsigned integer
uint64	8	4	64 bits unsigned integer

Note: When reading and writing integer-type variables, values are transmitted without the decimal point. For the correct representation, please see the remarks-field in the tables below.

Note: Variables spanning multiple registers use ‘big-endian’ data representation.

For additional information regarding using your Modbus device, please read our ‘General Modbus Communication Protocol’ and ‘Modbus troubleshooting guide’ that are available through our website or your distributor.

Runtime variables of the B-CONNECTED

Reading flow rate, total and accumulated total: When reading runtime variables, the given value may differ slightly from the value that is displayed on the display – this is due to the fact that the display is limited in the number of digits and may have a slower update rate.

When variables are read in integer format, the returned values are given including the decimals. For example, when two decimals are selected for total and total has a value of 123456.78 the display will show 23456.78 while communication will read a “total” of 12345678 (note that the decimals should be adapted according the setting in “total decimals” which is in this case 2).

Runtime variables of the B-CONNECTED – Integer based – Individual read						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 255 [h] 0x00FF	40256	battery status	1	R	uint16	0 = unknown 1 = normal 2 = low battery
[d] 516 [h] 0x0204	40517	error status (bitfield)	1	R	uint16	[d] 0 = no error [d] 1 = display error [d] 2 = data-storage error [d] 4 = initialization error
[d] 4640 [h] 0x1220	44641	Total command register	1	R/W	uint16	Commands: 0x0102: Clear total

Note: The variables shown in above list must always be read or written individually, for the indicated number of registers, in 1 single action!

Runtime variables of the B-CONNECTED – Integer based – Contiguous read						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 6146 [h] 0x1802	46147	total	4	R	uint64	0.000...9999999999 Representation: unit, decimals depending on variables 32, 33
[d] 6150 [h] 0x1806	46151	accumulated total	4	R	uint64	0.000...99999999999999 Representation: unit, decimals depending on variables 32, 33
[d] 6154 [h] 0x180A	46155	flow rate	2	R	uint32	0.000...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50

Note: The list of runtime variables shown above can be read as one contiguous list of registers. Unused registers return 0.

Configuration variables of the B-CONNECTED

The variables shown in the following lists must always be read or written individually, for the indicated number of registers, in 1 single action!

Total						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 32 [h] 0x020	40033	unit	1	R/W	uint16	0=none 2=m3 4=lb 6=US GAL 1=L 3=kg 5=GAL 7=bbl
[d] 33 [h] 0x021	40034	decimals	1	R/W	uint16	0...3
[d] 34 [h] 0x022	40035	K-factor	2	R/W	uint32	1...9999999 Representation: 0.000010...9999999 depending on variable 37: decimals K-factor.
[d] 37 [h] 0x025	40038	K-factor decimals	1	R/W	uint16	0...6

Flowrate						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 48 [h] 0x030	40049	unit	1	R/W	uint16	0=none 3=m ³ 6=ton 9=Lb 1=mL 4=g 7=GAL 10=cf 2=L 5=kg 8=bbl
[d] 49 [h] 0x031	40050	time unit	1	R/W	uint16	0=/sec 1=/min 2=/hour 3=/day
[d] 50 [h] 0x032	40051	decimals	1	R/W	uint16	0...3
[d] 51 [h] 0x033	40052	K-factor	2	R/W	uint32	1...9999999 Representation: 0.000010...9999999 depending on variable 54: decimals K-factor.
[d] 54 [h] 0x036	40055	K-factor decimals	1	R/W	uint16	0...6

Flowmeter						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 96 [h] 0x060	40097	flowmeter signal	1	R/W	uint16	0=Reed 2=PNP 4=coil 1=NPN 3=NAMUR

Analog output						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 112 [h] 0x070	40113	analog output	1	R/W	uint16	0=disable 1=enable
[d] 113 [h] 0x071	40114	minimum rate	2	R/W	uint32	0...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50
[d] 116 [h] 0x074	40117	maximum rate	2	R/W	uint32	0...9999999 Representation: unit, time, decimals depending on variables 48, 49, 50
[d] 120 [h] 0x078	40121	tune minimum	1	R/W	uint16	0...9999
[d] 122 [h] 0x07A	40123	tune maximum	1	R/W	uint16	0...9999

Pulse output						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 141 [h] 0x008D	40142	mode	1	R/W	uint16	0=disable 1=long 2=inter 3=short
[d] 133 [h] 0x085	40134	quantity decimals	1	R/W	uint16	0...3
[d] 130 [h] 0x082	40131	pulse per X quantity	2	R/W	uint32	1...9999999 Representation: 0.000001...9999999, decimals depending on variables 133

Modbus communication						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 144 [h] 0x090	40145	speed (baudrate)	1	R/W	uint16	0=1200 2=4800 4=9600HP 6=38400 1=2400 3=9600 5=19200 7=57600
[d] 145 [h] 0x091	40146	modbus address	1	R/W	uint16	1...247
[d] 146 [h] 0x092	40147	modbus mode	1	R/W	uint16	0=off 1=RTU 2=ASCII 3=printer
[d] 1271 [h] 0x4F7	41272	data bits	1	R/W	uint16	0=8 bits 1=7 bit
[d] 1272 [h] 0x4F8	41273	parity	1	R/W	uint16	0=none 1=even 2=odd
[d] 147 [h] 0x093	40148	delay	1	R/W	uint8	0...255 Representation: ms - delay between receiving a (valid) modbus command and sending the response
[d] 25 [h] 0x019	40026	reboot	1	R/W	uint16	Returns 0 on read. Write 0xA50F for unit restart, 0x5AF0 for factory settings

Others						
PDU ADDRESS	HOLDING REGISTER	VARIABLE	NO. REGISTERS	R/W	TYPE	VALUE / REMARKS
[d] 160 [h] 0x0A0	40161	model number	1	R	uint16	0...9999
[d] 173 [h] 0x0AD	40174	model suffix	1	R	char	Representation: ASCII character
[d] 162 [h] 0x0A2	40163	firmware version	2	R	uint32	0...999999 Representation: xx.xx.xx
[d] 165 [h] 0x0A5	40166	serial no	2	R	uint32	0...9999999 Representation: xxxxxxx
[d] 168 [h] 0x0A8	40169	PIN	1	R/W	uint16	0...9999
[d] 67 [h] 0x0043	40068	backlight	1	R/W	uint16	0=off 1=on

Appendix D. DECLARATION OF CONFORMITY

EU Declaration of Conformity

Fluidwell B–Series indicators

Veghel, February 2022

We, Fluidwell BV, declare under our sole responsibility that the B–Series indicators are designed and will operate conform the following applicable European Directives and Harmonised Standards, when installed and operated according to the related manuals:

EMC Directive	2014/30/EU	EN 61000–6–2:2005; EN 61000–6–3: 2007 /A1:2011; EN 61326–1:2013
RoHS Directive	2011/65/EU (incl. current amendments)	EN 50581:2012 EN IEC 63000:2018

Last two digits of the year in which the CE marking was affixed: 16.

I. Meij, Manager Technology



Fluidwell BV – P.O.Box 6, 5460 AA, Veghel, The Netherlands – Voltaweg 23, 5466 AZ, Veghel, The Netherlands
Fluidwell BV is ISO9001 certified by DEKRA Certification BV, Meander 1051, 6825 MJ, Arnhem, The Netherlands.

UKCA Declaration of Conformity

Fluidwell B–Series indicators

Veghel, February 2022

We, Fluidwell BV, declare under our sole responsibility that the B–Series indicators are designed and will operate conform the following applicable UK Legislation and Standards, when installed and operated according to the related manuals:

Electromagnetic Compatibility Regulations 2016	BS 61000–6–2:2005; BS 61000–6–3: 2007 /A1:2011; BS 61326–1:2013
The Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012 (incl. current amendments)	BS EN 50581:2012 BS EN IEC 63000:2018

Last two digits of the year in which the UKCA marking was affixed: 22.

I. Meij, Manager Technology



Fluidwell BV – P.O.Box 6, 5460 AA, Veghel, The Netherlands – Voltaweg 23, 5466 AZ, Veghel, The Netherlands
Fluidwell BV is ISO9001 certified by DEKRA Certification BV, Meander 1051, 6825 MJ, Arnhem, The Netherlands.

INDEX OF THIS MANUAL

actual settings	36	main-function	9
alarm	8	maintenance	26
analog		NAMUR-signal	23
disable/enable	13	NPN signal	22
flowrate max.	14	operational	7, 26
flowrate min.	14	operator level	7
tune / calibrate	14	others	15
battery low	8	PNP-signal	22
battery replacement and disposal	27	power supply	24, 25
clear total	8	problem solving	30
coil-signal	21	pulse	
Configuration	9	amount	15
contents	4	decimals	14
declaration of conformity	34	mode	14
disposal	2	pulse output	24
electrical installation and safety	20	reed-switch:	23
flowmeter		safety instructions	2
signal	13	SETUP-level	9
flowrate		technical specification	28
decimals	13	terminal connectors	21
display	8	total	
K-factor	13	accumulated	8
K-factor decimals	13	clear	8
measuring unit	13	decimals	12
time unit	13	display	8
functional description	5	K-factor	12
Installation general conditions	16	K-factor decimals	12
keys	7	unit	12

LIST OF FIGURES

Fig. 1: Typical application for the B-CONNECTED	5
Fig. 2: Control panel	7
Fig. 3: Example of display information during process	7
Fig. 4: Example of low-battery alarm.	8
Fig. 5: SETUP-menu matrix structure	9
Fig. 6: Example external label with general data.	17
Fig. 7: Example internal label with terminal information.	17
Fig. 8: Dimensions enclosure	18
Fig. 9: Installation – Wall mounted	19
Fig. 10: Installation – Sensor mounted	19
Fig. 11: Terminal connectors	21
Fig. 12: Terminal connections – Coil signal input	21
Fig. 13: Terminal connections – NPN signal input	22
Fig. 14: Terminal connections – PNP signal input	22
Fig. 15: Terminal connections – Reed-switch signal input	23
Fig. 16: Terminal connections – NAMUR signal input	23
Fig. 17: Terminal connections – 4-20mA analog output	24
Fig. 18: Terminal connections – Transistor output	24
Fig. 19: Terminal connections – RS485 port connection	25
Fig. 20: Terminal connections – RS485 port	25

LIST OF CONFIGURATION SETTINGS				
SETTING		DEFAULT	DATE:	DATE:
1	TOTAL	Enter your settings here		
1.1	UNIT	L		
1.2	DECIMALS	0		
1.3	K-FACTOR	0000001		
1.4	K-FACTOR DECIMALS	0		
2	RATE			
2.1	UNIT	L		
2.2	TIME	/min		
2.3	DECIMALS	0		
2.4	K-FACTOR	0000001		
2.5	K-FACTOR DECIMALS	0		
2.6	CALCULATION	1 sec		
3	METER			
3.1	SIGNAL	coil		
4	A-OUT			
4.1	OUTPUT	disable		
4.2	RATE-MIN (4mA)	0 L		
4.3	RATE-MAX (20mA)	99999 L		
4.4	TUNE-MIN (4mA)	1368		
4.5	TUNE-MAX (20mA)	5466		
5	D-OUT			
5.1	MODE	Off		
5.2	DECIMALS	0		
5.3	AMOUNT	0 L		
6	OTHERS			
6.1	MODEL	BASIC71		
6.2	SOFTWARE VERSION	03:06: _ _		
6.3	SERIAL NO	_ _ _ _ _		
6.4	PIN	0000		
6.5	BACKLIGHT	off		